



Exploded view of Feeder-Robot

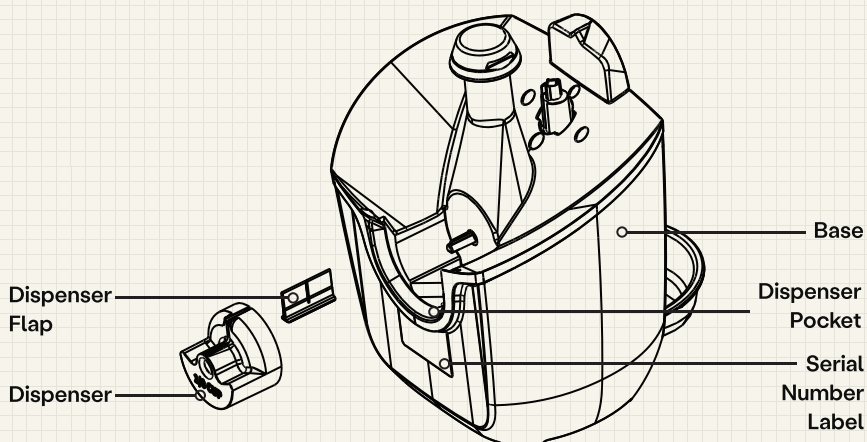

Exploded view of dispenser

How to swap the dispenser

- 1 Power OFF and unplug Feeder-Robot.
- 2 Remove the hopper lid, then remove all food from the robot.
- 3 Remove the hopper insert if using.
- 4 Remove the hopper by twisting the lock counter-clockwise and lifting vertically away from the robot.
- 5 Remove the installed dispenser by pinching the vertical hump of the dispenser and pulling horizontally from the back of the robot, sliding it off the motor stem.
- 6 Remove the dispenser flap from the current dispenser (slide out).
- 7 Attach the dispenser flap in the new dispenser flap slot (slide in).
NOTE: Your new dispenser may come with a dispenser flap already installed.
- 8 Now would be a great time to clean the unit with a slightly damp cloth or Whisker Cleaner Wipes. Dry before re-assembling.
- 9 Firmly attach the new dispenser to the robot by sliding it onto the motor stem with the text facing out.
NOTE: Motor stem is keyed and the dispenser will only go on one way.
- 10 Attach the hopper to the robot. Make sure the hopper lock is secure and the dispenser is not touching the hopper wall.
- 11 Replace the hopper insert if desired (recommended).
- 12 Plug in the robot and power ON.
- 13 Test by pressing the Feed button: The dispenser should rotate smoothly and the motor should not sound restricted.

If using the Whisker app  visit the Controls page. If you installed the 1/4-cup dispenser, disable the 1/8-cup mode. If you installed the 1/8-cup dispenser, enable the 1/8-cup mode.